Uniden®

ELITE 8815/8815+1

Series Owner's Manual

OWNER'S **MANUAL**

Contents

Welcome 1
Features 1
Terminology 2

Controls & Functions 3

Setting up the Phone 7
Choose the best location 7
Install the rechargeable battery pack 8
Low battery alert 9
Cleaning the battery charging contacts 9
Connect the base and charge the handset 10

Expanding Your Phone 12
Backwards/Forwards Compatibility 12
Connect the expansion handset's charger 13
Register the Handset 13
Register an Expansion handset to main base 14
Changing the Digital Security Code 15
Installing the Holster 15
Installing the Beltclip (Extra Handset Only) 16

Optional Headset Installation 16

Using the Interface 17
Example of the standby mode display 17
Display Icons 18
Soft Key Function 19
Entering text 21

Main Menu Options 22

System Setup Menu 23

Using the Bluetooth Feature 36
Using Bluetooth Headset 36
De-register the Bluetooth Headset 40

Using Your Phone 41
Making Calls 41
Receiving a call/Open to Answer set to OFF 43
Hanging Up 43
Switching to the Handset Speakerphone During a Call 43
Moving out of range 44
Call Waiting 44
Placing a Call on Hold 45
Conferencing 46
Redialing Calls 48
Using the Handset Volume 49
Setting Menu 49
Mute 51
Mute the Microphone 51
Tone Dialing Switch Over (Australia only) 52
Privacy Mode 52
Find Handset 52
Reminder (Handset only) 53

Using the Phonebook 55
Creating and Editing Phonebook Entries 55
Storing Caller ID or Redial Numbers in the Phonebook 58
Storing and Editing Numbers from the Dial Operation 58
Managing the Phonebook 59
Checking the number of stored entries 60
Changing the sorting order 60
Naming phonebook groups 61
Making Calls with the Phonebook 61

Caller ID Features 62
Using the Caller ID List 62
Deleting Caller ID numbers 63

Contents

Using One Touch Voice Mail Access **63**

Multi-Handset Features **64**
- Using DirectLink Mode 64
- Room/Baby Monitor 65
- Intercom 66
- Transferring a Call 67

Note on Power Sources **68**
- Power Failure 68
- Battery replacement and handling 68
- Warning 68

General Information **69**
- AC Adapter Information 69
- Battery Information 69

Troubleshooting **70**
- Bluetooth Trouble Shooting 72
- System Reset 73
- Liquid Damage 74

Index **75**

Warranty **80**

Welcome

Congratulations on your purchase of the Uniden cordless telephone. This cordless phone is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes.

Features

- 5.8GHz Digital Expandable
- Compatible with Bluetooth Enabled Headsets***
- Caller ID*
    - Caller ID on Call Waiting*
    - Name Tag (POP ID)**
    - Distinctive Ring**
- 100 Phonebook Names (4 Numbers Per Name)
- Recordable Ringer Tones
- Calendar with Schedule Reminder Capability

* The Caller ID and Caller ID on Call Waiting features require subscription to the services provided by your network supplier. There is usually a fee for these services. Caller ID on Call Waiting is currently unavailable in New Zealand.

** These features rely on the Caller ID service to function.

***The ELITE8815/ELITE88515+1 flip phone handset only is Bluetooth capable.

Be sure to visit our Website: www.uniden.com.au or www.uniden.co.nz

Terminology

- **Standby mode:** The handset is not in use. If it is off the cradle, no line has been activated. No dial tone is present.
- **Talk mode:** A telephone line has been activated on the handset, enabling a dial tone.
- **Flip Handset:** Flip-phone handset. ELITE8815 and ELITE8815+1 main base handset.
- **Extra Handset:** ELITE8815+1 extra handset (ELITE8805 model)

BLUETOOTH trademarks are owned by their proprietor and used by Uniden Australia and Uniden New Zealand under license.

Controls & Functions
ELITE8815/ELITE8815+1 Flip Phone Handset

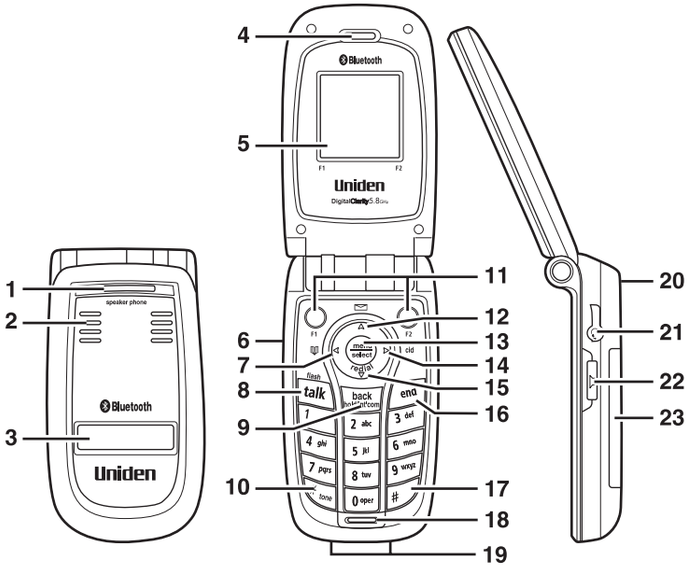

1. New Message LED
2. Speakerphone Speaker and Ringer
3. Sub LCD
4. Handset Earpiece
5. LCD display
6. ***Speaker Volume up/down*** key (P.50 & 51)
7. (phonebook)/ ◁ (P.55 & 20)
8. ***Talk/flash*** (P.41 &44)
9. ***Back/hold/int'com*** (P.20 & 45 & 66)
10. ****/tone*** (P.52)
11. Soft keys (P.19)
12. (message)/ △ (P.63 & 20)
13. ***Menu/select*** (P.20)
14. ***Cid*** (Caller ID)/ ▷ (P.62 &20)
15. ***Redial/*** ▽ (P.48 &20)
16. ***End*** (P.43)
17. **#** (P.73)
18. Handset Microphone
19. Handset Charging Contacts
20. Handset Antenna
21. Headset Jack Cover
22. (speaker phone)(P.42)
23. Handset Battery Compartment

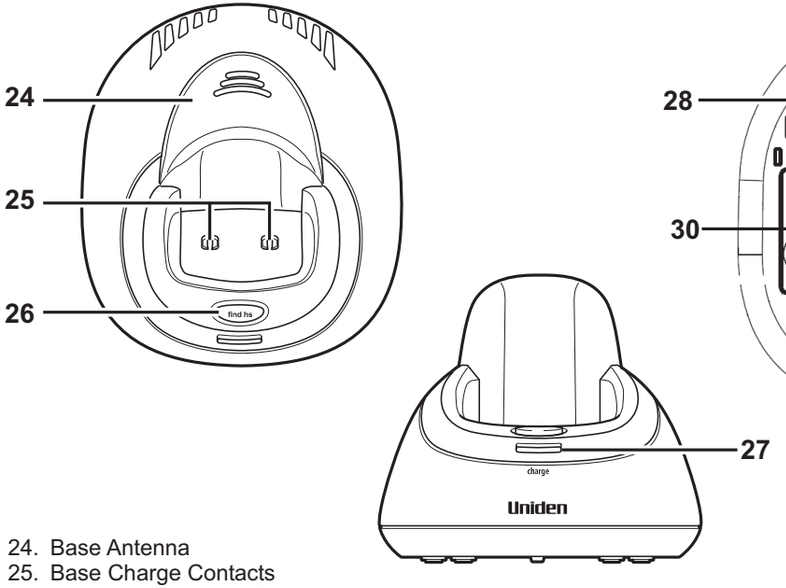

24. Base Antenna
25. Base Charge Contacts
26. **Find hs** (handset)(P.52)
27. Handset Charge LED
28. **AC ADAPTER** Jack
29. **TEL LINE** Jack
30. Registration button

ELITE8815+1 Extra Handset

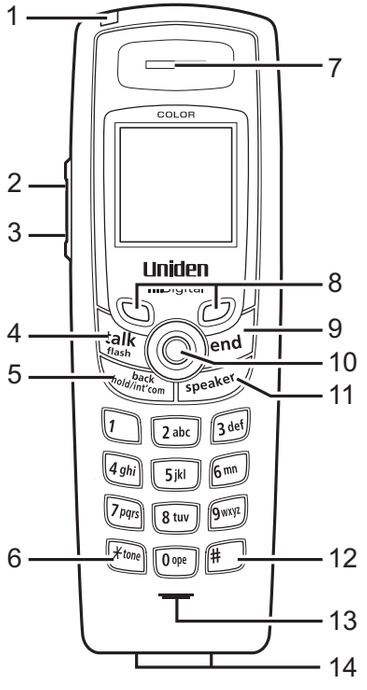

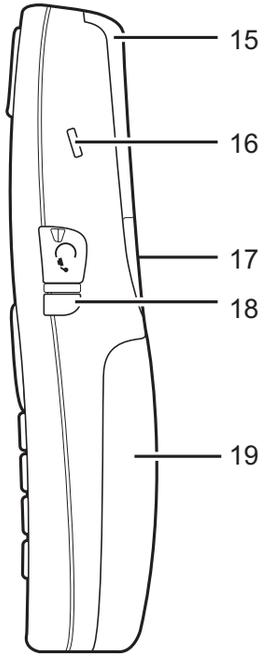

1. New Message LED
2. Volume (up)(P.51)
3. Volume (down)(P.51)
4. ***Talk/flash*** (P.41 & 44)
5. ***Back/hold/intercom*** (P.20, 45 & 67)
6. ****/tone*** (P.52)
7. Ear Speaker
8. Soft keys (P.19)
9. ***end*** (P.43)
10. Joystick (P.20)
11. ***Speaker*** Phone (P.42)
12. **#** (P.73)
13. Handset Microphone
14. Handset Charging Contacts
15. Handset Antenna
16. Beltclip Hole
17. Speakerphone Speaker and Ringer
18. Headset Jack
19. Handset Battery Compartment

ELITE8815+1 Extra Handset Charger

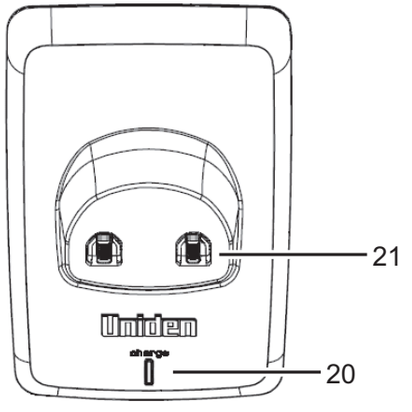

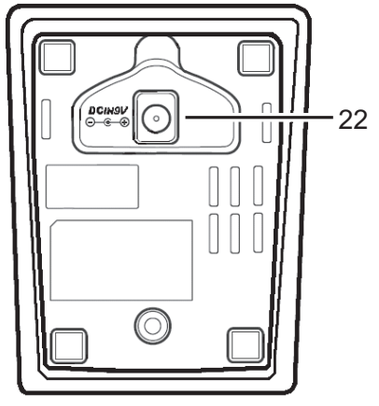

20. Charge LED
21. Charge Contacts
22. **DC IN 9V** jack

note

For maximum range:

- Do not hold the handset where you would block the signal.

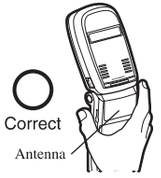

- Metal and reinforced concrete may affect cordless telephone performance.

Setting up the Phone

Choose the best location

When choosing a location for your new phone, here are some important guidelines you should consider:

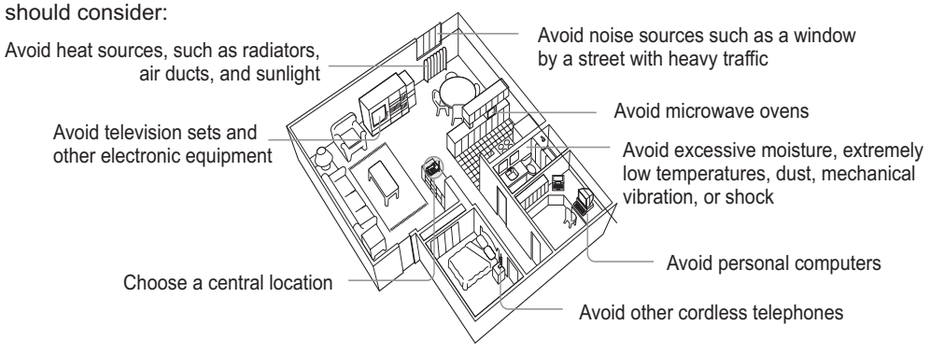
Avoid heat sources, such as radiators, air ducts, and sunlight
Avoid noise sources such as a window by a street with heavy traffic
Avoid microwave ovens
Avoid television sets and other electronic equipment
Avoid excessive moisture, extremely low temperatures, dust, mechanical vibration, or shock
Avoid personal computers
Choose a central location
Avoid other cordless telephones

- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors, Microwave ovens, and fluorescent lighting.
- For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.
- If your home has specially wired alarm equipment connected to phone line, be sure that installing the system does not disable your alarm equipment.
- If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.

Install the rechargeable battery pack

Follow the steps below if you need to install a battery.

1) Press down on the handset battery case cover (use the finger indention for a better grip) and slide the cover downward to remove.

2) Place the battery pack in the battery compartment with the connectors on the battery and on the compartment aligned.

3) Place the battery case cover back on the handset and slide it upwards until it clicks into place.

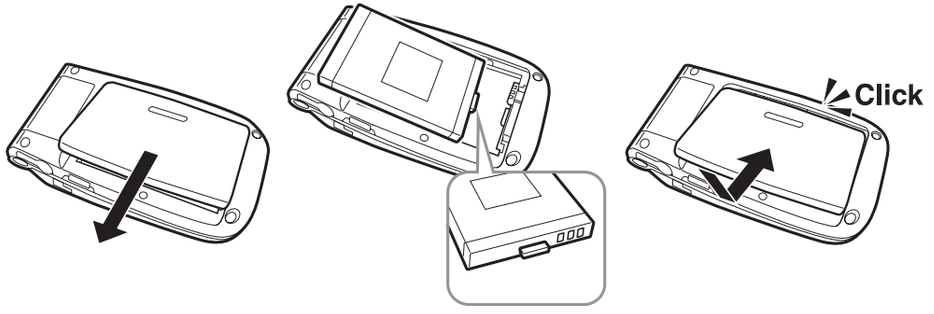

note

Use only the Uniden (BT-0002) rechargeable battery pack supplied with your cordless telephone.

note

- Even when the battery pack is not being used, it will gradually discharge over a long period of time.
- For optimum performance, be sure to return the handset to the cradle after each telephone call.
- If the handset is left off of the base, the actual talk mode duration will be reduced respective to the amount of time the handset is off the cradle.

Low battery alert
When the battery pack is very low, the phone is programmed to eliminate functions in order to save power.

The battery pack needs to be charged when:
- The empty battery icon appears.
- `Low Battery` appears in the display.

If the phone is in standby mode, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the cradle.

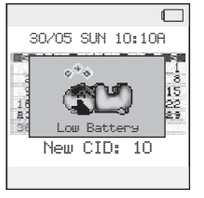

Cleaning the battery charging contacts
To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the cradle.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

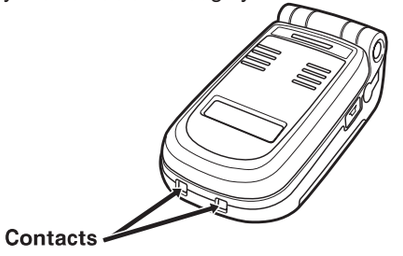

Connect the base and charge the handset

1) Connect the AC adapter to the **AC ADAPTER** jack.
   Place the base close to the AC outlet to avoid long extension cords.

2) Connect the AC adapter to a continuous power supply (i.e.,an outlet that is not controlled by a switch).

3) Close the handset and place it in the base with the smaller LCD screen facing forward.

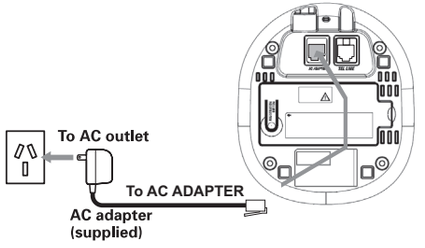

4) Make sure that the **charge** LED illuminates.
   If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.

5) **Charge your handset at least 10 hours before plugging into the phone line.**

note

- **Use only the supplied AAD-8815 AC adapter. Do not use any other AC adapter.**
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Don't place the base in direct sunlight or subject it to high temperatures. The battery may not charge properly.

tip

If your telephone outlet isn't modular, contact your telephone company.

6) Once the handset battery pack is fully charged, connect the telephone line cord to the **TEL LINE** jack and to a telephone outlet.

High Speed Internet

If your phone line also has High Speed Internet please ensure you are using an approved line filter before connecting the telephone cord.

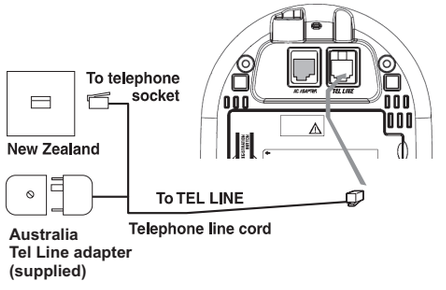

Expanding Your Phone

Your phone can support a total of ten handsets. Expansion handsets do not need to be connected to a phone jack. Expansion handsets allow you to use additional features such as DirectLink Mode and up to 3-way conference calling. Expansion handsets need to be registered to the base before they will operate.

10 Handsets

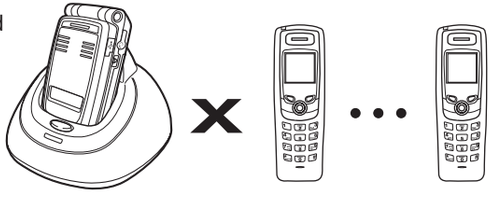

Backwards/Forwards Compatibility

Your phone is compatible with other Uniden 5.8GHz Digital Expandable Handsets. Compatible models include the ELITE**8855** and ELITE**8805.** (Please check www.uniden.com.au or www.uniden.co.nz for an updated list of expansion handset compatible with this series.)

ELITE8815+1 Extra Handset

Your ELITE8815+1 includes an extra non-flip phone handset.
Use only the BT-0003 rechargeable battery pack supplied for the Extra Handset.
To install the BT-0003 rechargeable battery pack follow the same instructions as for the Flip Handset (see page 8). Low battery alert and maintenance of the charge contacts are the same as for the Flip Handset (see page 9).

note

- Advanced features may not be supported by older handsets.
- If you have any trouble with your phone, visit our web site at www.uniden.com.au or www.uniden.co.nz

note

Use only the supplied AAD-600S AC adapter. Do not use any other AC adapter.

Connect the expansion handset's charger

The handset is powered by a rechargeable battery pack. The battery recharges automatically when the handset is placed in the charger.

1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 240V AC wall outlet.
2) Set the charger on a desk or tabletop, and place the handset in the charger with the LCD screen facing forward.
3) Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the charger charging contacts.
4) Charge the handset battery pack for at least 15 - 20 hours before using your new cordless telephone for the first time.

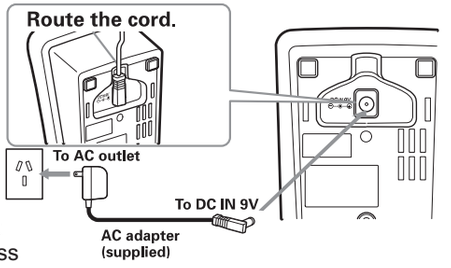

Register the Handset

Handsets supplied with the phone are registered to the base by the factory. Pre-registered handsets display a handset ID number. Handsets that have not been registered display `MUST place the handset in base to register! Models may vary, refer to Owners Manual for help` in the LCD. `Handset must be registered` will also appear in the sub LCD of a flip handset that has not been registered. When you register an extra handset to the base, the handset ID will be assigned. Only one handset can be registered at a time.

Register an Expansion handset to main base

Before the expansion handset is registered, the battery pack MUST be charged for **15-20** hours .

To register a Flip Handset, simply place it in the main base.
While the handset is registering, `Handset Registering` will appear in the LCD. When `Registration complete` is displayed, the handset has been registered to the base. If `Registration failed` appears, please try these steps again.

To register an ELITE8805 handset, follow the steps below:

1 Press and hold the Registration button at the underside of the base.

2 Keep pressing the Registration button until the handset charge LED on main base starts to blink.

3 On the handset, press and hold the **#** key until you hear a beep.

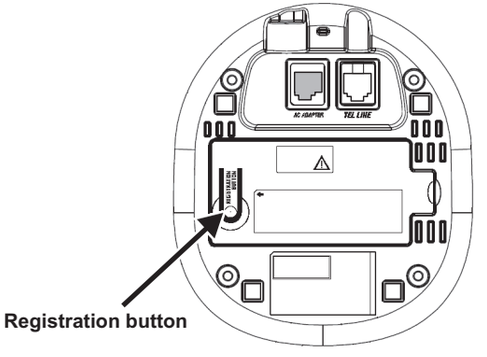

note

Changing the Digital Security Code

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code. To change the digital security code:

1. De-register all the handsets you have (see page 73).

2. Re-register each handset by following the steps on page 14.

Installing the Holster

You must remove the holster to charge the handset.

- Line up the groove on the back of the handset with the groove on the holster. The handset fits in the holster only one way.

- Slide the phone into the holster.

- Use the spring clip to attach the holster to your belt or pocket.

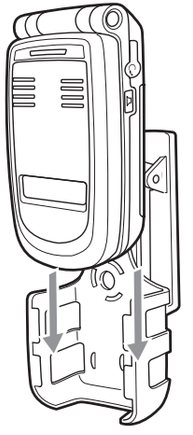

Installing the Beltclip (Extra Handset Only)

To attach the beltclip
Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

To remove the beltclip
Pull either side of the beltclip to release the tabs from the holes.

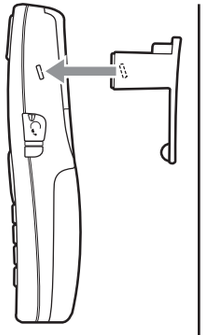

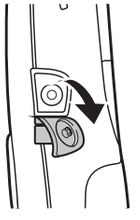

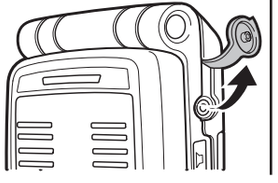

note

To use with a Bluetooth ® headset, see page 36.

Optional Headset Installation

Your phone may be used with an optional headset. To use an optional headset, insert the headset plug into the headset jack.

Your phone is ready for hands- free conversations. (Headsets may be purchased by visiting our website at www.uniden.com.au or www.uniden.co.nz .)

Using the Interface

Example of the standby mode display

•Handset

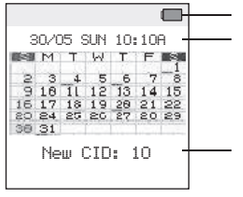

Battery icon

Date, Day of the week, and time

Number of new caller ID calls received

•Sub-LCD (Flip Handset Only)



Date and time/Battery icon

Number of new caller ID calls received

Display Icons

ICON		DESCRIPTION
Handset	**Flip Handset Sub-LCD**	
		Battery icons indicate the handset battery status. This icon cycles depending on the battery status (empty, low, medium, and full).
		Ringer off icon indicates that ringer is turned off.
	-	**Bluetooth (Flip Handset Only)** icon appears when you are using bluetooth features. The icon is blue when the bluetooth device is on.
		Mute icon appears when you mute the handset.
		Speaker icon appears when the handset speaker phone is used.
	-	When a new message is received, an envelope icon is displayed on the LCD screen.
		Privacy icon appears when the Privacy Mode is turned on.

note

The flip handset display will be used throughout this manual.

The Bluetooth feature is only available on the flip-phone handset. The ELITE8815+1 extra handset does not show the Bluetooth icon on its display.

Soft Key Function

"Soft"keys are keys that change function during the operation of the phone. There are two soft keys on the handset.

The text right above the soft key indicates that key's current function. For example, when the phone is in standby mode, pressing Soft Key 2 on the handset makes a selection. When the phone is in talk mode, pressing Soft Key 2 brings up the options menu. Complete information on the features controlled by the soft keys can be found under each feature.

In standby mode

F2 Soft key

In talk mode

F2 Soft key

To make menu selections, please follow the instructions below:

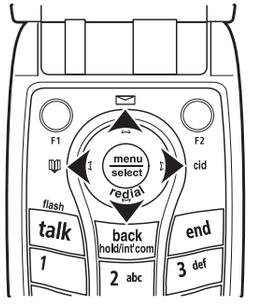

The four most commonly used functions are accessible just by pressing the directional key on the Flip Handset or by moving the joystick on the Extra Handset up (messages), down (redial), right (CID) or left (Phonebook).

To Make Menu Selections:

Press ***menu/select*** on the Flip Handset or press in on the centre of the joystick on the Extra Handset.
Highlight the option you want by pressing up, down, right, or left key on the Flip Handset, or by moving the joystick up, down, right, or left on the Extra Handset. This will move the cursor; the option currently highlighted appears in reversed out text.

Select the highlighted option by pressing ***menu/select*** or by pressing the centre of the joystick
OR
by pressing the left or right soft key to action the option shown on the bottom line of the display.

F2 Soft key

To exit the menu and return to standby, press the ***end*** key on the handset.

To go back a level in the menu, press the ***back/hold/int'com.***

note

- The Flip Handset menu selection will be used to describe selecting menu options throughout this manual.
- Please see the instructions here for the equivalent Extra Handset menu selection using the joystick.
- Pressing ***menu/select*** on the Flip Handset is the same as pressing the center of the joystick on the Extra Handset.

Entering text

You can use the number keypad on your phone to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key.

Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.
If two letters in a row use the same number key, enter the first letter, then use the right key to move the cursor to the next position to enter the second letter.

	Number of times key is pressed								
keys	**1**	**2**	**3**	**4**	**5**	**6**	**7**	**8**	**9**
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	p	q	r	s	7
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 oper	&	(	)	<	>	/	(blank)	-	_
	.	,	:	?	!	@	'	"	*
	#	0							

For example, to enter Movies:
1) Press 6 once to enter M.
2) Use right key to move the cursor to the right.
3) Press 6 six times to enter o.
4) Press 8 six times to enter v.
5) Press 4 six times to enter i.
6) Press 3 five times to enter e.
7) Press 7 eight times to enter s.
8) Press ***menu/select*** to end your text entry.

If you make a mistake while entering a name, use right or left key to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the incorrect character, and then enter the correct character.
To delete all characters in the text entry field, press and hold the **DELETE** soft key.

Main Menu Options

Your phone has various main menu options:

On the handset, the options are DirectLink, Room Monitor, Messages, Reminder, Speaker Setup, Display Options, Ringer Options, System Setup and Bluetooth.

Note:

- If you do not press a key within 30 seconds, the phone will time out and exit the menu mode. When setting Date and Time, the time-out period is extended to two minutes.

Handset Main Menu Options

Direct Link	Room Monitor	Messages
Ringer Options	Speaker Setup	Display Options
Reminder	System Setup	Bluetooth (Flip Handset Only)

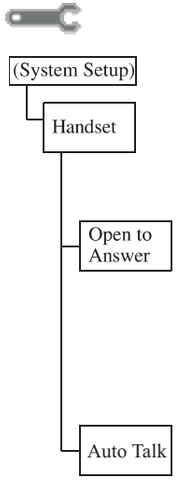

System Setup Menu

System Setup

Handset

The following submenu options must be set separately for each handset.

Open to Answer (Flip Handset Only)

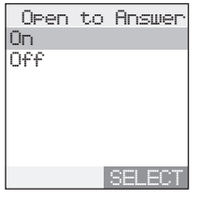

Open to Answer lets you answer the phone by opening the cover of the handset. To turn on Open to Answer, go to `Open to Answer` and select `On`. A confirmation tone tells you that Open to Answer is active.

Auto Talk (ELITE8815+1 Extra Handset Only)

Auto Talk lets you answer the phone by removing the handset from the cradle. To turn on Auto Talk go to `Auto Talk` and select `On`. A confirmation tone tells you that Auto Talk is active.

Any Key Answer

Any Key Answer lets you answer the phone by pressing any key on the number pad. To turn on Any Key Answer, go to Any Key Answer and select On . A confirmation tone tells you that Any Key Answer is active.

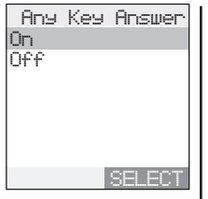

Banner Display

You can change the name your phone displays on the screen. If you have more than one handset, you can use the banner name to identify your handset during handset-to-handset functions like intercom and DirectLink. Go to Banner Display and enter the name you want to use. You can use up to 10 characters. Use the **DELETE** soft key to delete an existing handset name. Press ***menu/select*** when you're finished.

Key Touch Tone

Key Touch Tone is the tone your keypad makes when keys are pressed.

To turn off the tone, go to Key Touch Tone and select Off. A confirmation tone tells you that the tone has been deactivated.

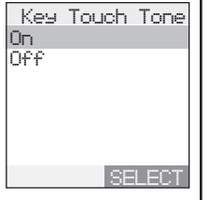

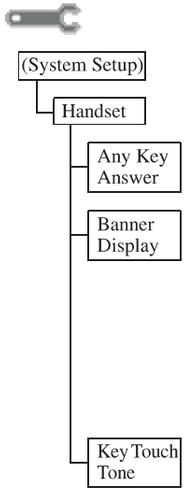

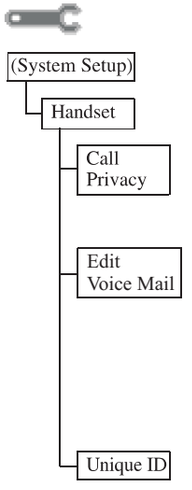

Call Privacy

If you don't want other registered handsets to interrupt you on a call, you can turn on privacy mode. As long as your handset is in privacy mode, other handsets won't be able to join your call or make any calls of their own. To turn on privacy mode, go to `Call Privacy` and select `On`. You will hear a confirmation tone.
You can turn on privacy mode when the phone is in standby or when you're already on a call (see page 52).

Edit Voice Mail

If you subscribe to a message service through your network supplier, you can store or edit an access number for one touch access (see page 63). To store an access number, go to `Edit Voice Mail`. Enter/edit the access number. Press **menu/select** when done, you will hear a confirmation tone.

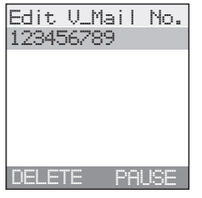

Unique ID (Distinctive Ring)

You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook; if you've assigned a distinctive ringer and pictures to that number, the phone uses it so you know who's calling. To turn on distinctive ringing, go to `Unique ID` and select `On`. A confirmation tone tells you that distinctive ringing is active.
If you don't activate Unique ID, the phone uses the default picture.

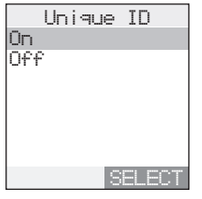

Global Setup

Global settings apply to registered handsets. If you change something under the global menu, you change it for all handsets. Only one handset can change global settings at a time, and you have to make sure the phone is not currently being used. Some features may not be supported by older handsets.

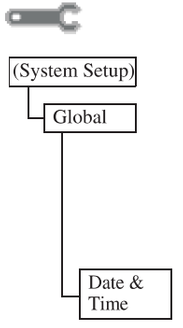

Date and Time

To change the date and time shown in the display, go to `Date & Time`. Use the up, down, right, left keys to highlight the part you want to change (date and time). Use the number keypad or ***/tone*** to change each part. Press ***menu/select*** when you're finished.

Note: If you don't press any keys for two minutes when setting the date and time, the phone will exit the menu mode.
If you subscribe to a Caller ID service, you may set the date only.
The time will automatically update with the first call.

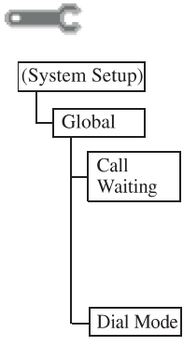

Call Waiting (Caller ID on Call Waiting)
Your phone supports Caller ID on Call Waiting, so you can see the number of someone who calls when you're already on the line.
You'll need to subscribe to this feature with your phone company before you can use them.

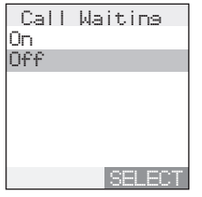

To let your phone support this feature, go to `Call Waiting`. Select `On`, and a confirmation tone tells you that your phone is ready to use this feature.

Dial Mode (Australia Only)
Your phone can communicate with the telephone network in two different ways: tone dialing and pulse dialing. These days, most phone networks use a method called tone dialing, so your phone comes programmed for tone dialing.

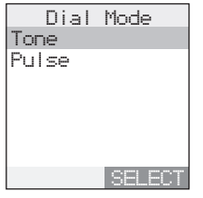

If your phone company uses Pulse dialing, you'll need to change your phone's dial mode. There's an easy way to tell: try making a call. If your call connects, your phone's setting is fine. If not, go to `Dial Mode` and select `Pulse`. A confirmation tone tells you you've changed the dial mode, and you can try making a call again.

Name Tagging
The Name Tag feature works with the Caller Display number from Caller ID. A subscription to the Caller ID service is required from your network provider. There is usually a fee for this service.
When the phone rings, the received caller display number will be compared to numbers stored in the phonebook. If there is a match any name stored with the phonebook number will be displayed.

To use this feature go to Name Tagging, select On. A confirmation tone tells you that your phone is ready to use this feature.

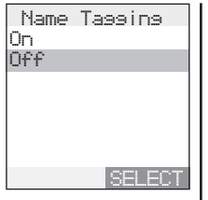

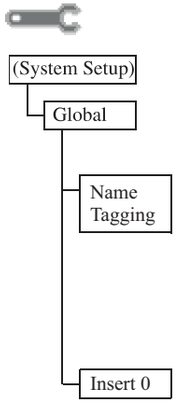

Insert 0
This feature adds '0' or '00' to the number, when you receive Caller ID messages. The default setting for New Zealand is On. The default setting for Australia is Off.

To set this feature got to Insert 0, select On. A confirmation tone tells you that your phone is ready to use this feature.

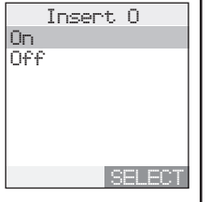

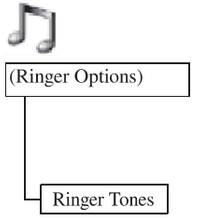

Setting the Ringer Options

This menu lets you customize Ringer or Speaker Volume setting in your phone. You can set these options separately for each handset.

Ringer Tone

You can set a different ringer for each handset. This phone comes with 10 prerecorded songs and 15 different ringer tones; you can also record your own ringer tones (see page 31).

-Songs: Beethoven's Symphony #9 [Beethoven9], For Elise [Elise] , Home Sweet Home [Hm Swt Hm] , Lorri Song #6 [Lorri Song] , WT Overture , Twinkle Star, Je Te Veux, Waltzing Matilda [W Matilda], Old MacDonald [Old MacDld], We Wish You A Merry Christmas [Merry-Xmas].

-Ringer tones: Flicker, Clatter, Coin Toss, Synthesize, Finish Line, Soft Alert, Wake Up, Lighting Bug, Bebop, Tone Board, Chirp, Party Clap, Reminder, Burble, TeleTone.

1) Go to `Ringer Tones` and highlight the ringer you want. (Each ringer will sound as you highlight it.)

2) Press ***menu/select*** to confirm the setting. You'll hear a confirmation tone, and the phone will go back to the menu.

Vibrate All (Flip Handset Only)

The vibrate alert causes the handset to vibrate when an incoming call is received. For safety reasons, the handset will not vibrate while it is charging in base. To turn on the Vibrate Alert for all incoming calls, intercom pages, etc., go to Vibrate All and select On. A confirmation tone tells you that Vibrate Alert is active.

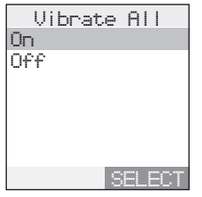

(Ringer Options)

Vibrate All

(Ringer Options)

- Call Vibrate
- Rec/Edit Rings

Call Vibrate (Flip Handset Only)

You can choose a vibrate pattern (4 patterns (1-4) and Off). To set Vibrate, go to `Call Vibrate` and then select the pattern. Selecting OFF will turn off the vibrate feature for incoming calls only. A confirmation tone tells you that Vibrate Pattern is active.

Customize Your Own Distinctive Ringer Tones

Your phone can store up to 5 different recordings to use as ringer tones (a total of 100 seconds). Each recording must be less than 20 seconds long.

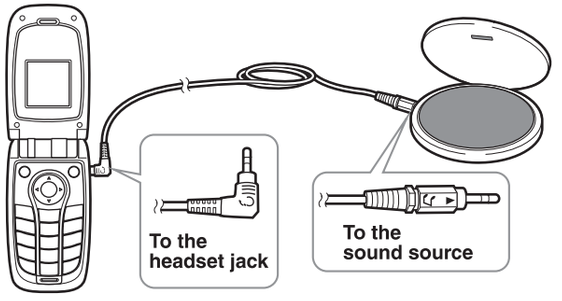

Storing Ringer Tones

1) Connect the audio recording cable to the handset and sound source (e.g. stereo or CD player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source.
   You can also simply use the handset's microphone by holding the handset close to the sound source.

2) Go to Rec/Edit Rings.
3) Select a location from 1-5, and press the **OPTIONS** soft key.
4) Select Record. To start recording, press the **RECORD** soft key. The message counter displays and then begins to count down.
5) When you are finished recording, press the **STOP** soft key. The phone will play the recorded ringer. To re-record the ringer, press the **ReRec** soft key while playing the ringer.
6) Enter the title of this ringer (up to 12 characters) using the number keypad, or the **DELETE** soft key, right, or left key.
7) Press ***menu/select*** , you will hear a confirmation tone, and Done! appears.

Playing the Ringer

1) Go to Rec/Edit Rings.
2) Select a ringer to play, and press the **OPTIONS** soft key.
3) Use the up/down key to select Play. To stop, press ***menu/select*** or the **STOP** soft key.

Changing Ringer Name

1) Go to Rec/Edit Rings.
2) Select a ringer you want to change the title, and press the **OPTIONS** soft key.
3) Use the up/down key to select Change Title.
4) Edit the title of this ringer (up to 12 characters) using the number keypad, the **DELETE** soft key, right, or left key. When you are finished, press ***menu/select***, you will hear a confirmation tone, and Done! appears.

(DisplayOptions)

Wall Paper

Delete Ringer
To delete a ringer tone, go to Rec/Edit Rings, and select the ringer you want to delete. Press **OPTIONS** soft key. Use **up/down** key to select Delete. Select Yes. You will hear a confirmation tone, and Deleted! appears. The ringer is deleted from the list, and the phone stays on the ringer list.

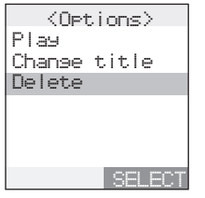

Display Options

The following submenu options must be set separately for each handset.

Wallpaper

Your phone has 34 preset wallpaper/images to choose from.

During standby mode the wallpaper will display on the Handset's LCD Screen. To set your wallpaper, scroll through Wall Paper options, and press the **VIEW** soft key. Press ***menu/select*** to activate the wallpaper of your choice.

Color Scheme
You can change the color of your phone's display. There are 5 different colors to choose from: Sky Blue, Haze Gray, Chic Purple, Coral Red, and Lime Green.
To change the color of the display, go to Color Scheme and select the color you want. As you scroll through the options, the phone displays the highlighted color for you.

LCD Contrast
LCD Contrast adjusts the Handset's display. To adjust the contrast, go to. LCD Contrast and use the up, down, right, or left key to adjust the contrast level you want. Press ***menu/select*** to activate it. You will hear a confirmation tone.

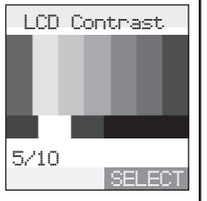

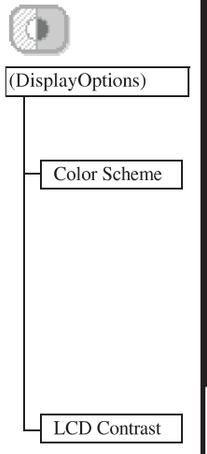

(DisplayOptions)

Animation Type

Animation Type

Your phone has 4 different system animations (Dog, Car, Frog and Abstract) with 7 different animation schemes:

delete

done

page

talk

batt-low

end

unavailable

To set your animation type, scroll through Animation Type options, and press the **VIEW** soft key. Press ***menu/select*** to activate the animation type of your choice.

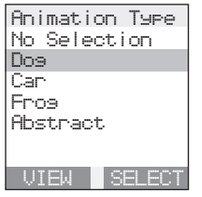

Using the Bluetooth Feature

Using Bluetooth Headset (Flip Handset Only)

The phone also supports Bluetooth v 1.1 compliant headsets.

Bluetooth headsets available on the market vary in performance and quality. For best results choose a high quality headset model.

Before you can use a bluetooth headset, you must pair it with the phone. Once you have paired your headset with the phone, you do not have to pair it again until you want to use it with another phone.

Registering the bluetooth headset

1) Prepare your bluetooth headset for pairing according to the headset's owner's manual on pairing.

2) With the phone in standby mode (not in use), press ***menu/select*** on the handset.

3) Select the Bluetooth icon on the handset's main menu display.

4) Use the up/down key to select Find/Pair , and then press ***menu/select*** .

note

- The Bluetooth headset must stay within 15 feet (5m) range of the cordless handset.
- If no device is detected, Bluetooth device was not found appears, and the phone goes back to the Bluetooth setup menu.
- Even if the handset ringer is turned off, a paired Bluetooth headset will still ring.

The Flip Handset will begin to search for a bluetooth device. Once detected, the headset's name will appear in the handset's display. (Example names are shown below.)

Press the **STOP** soft key to go back to show the list of the bluetooth headsets.

5) Scroll to a headset you want to pair with Flip Handset, and press the **SELECT** soft key.

6) Using the cordless handset, enter your headset's PIN code.

7) Press the **CONNECT** soft key.

When pairing is completed successfully will hear a confirmation tone, and `Pairing successful` appears on the handset.
If pairing failed, `Pairing failed try Again` appears.

Turning Bluetooth ON or OFF

The Bluetooth connection still uses power even when you're not currently using a Bluetooth device. To save power, you can turn off the Bluetooth connection when it's not in use.

1) When the phone is in standby mode, press ***menu/select*** on the handset.

2) Select the Bluetooth icon.

3) Use the up/down key to select On/Off, and then press ***menu/select*** .

4) Use the up/down key to select On or Off, and then press ***menu/select*** .

Viewing Paired Headsets

To review headsets paired to this cordless handset, follow the steps below:

1) When the phone is in standby mode, press ***menu/select*** on the handset.

2) Select the Bluetooth icon.

3) Use the up/down key to select Headset, and then press ***menu/select*** .
The headset name and serial number are displayed.
To back to the Bluetooth setting display, press ***back/hold/int'com*** .

Viewing Property of the Handset

To view the handset information, follow the following steps.

1) When the phone is in standby mode, press ***menu/select*** on the handset.
2) Select the Bluetooth icon.
3) Use the up/down key to select My Handset, and then press ***menu/select*** .
   The handset name and serial number are displayed.
   To go back to the Bluetooth setting display, press ***back/hold/int'com*** .

To reconnect the Bluetooth Headset

If a paired headset will not connect to the handset, you can reconnecting to the headset.

1) Make sure that Bluetooth is turned ON (see page 38).
2) When the phone is in standby mode, press ***menu/select*** on the handset.
3) Select the Bluetooth icon.
4) Use the up/down key to select Headset, and then press ***menu/select*** .
5) Press the **OPTIONS** soft key and select Reconnect.
6) Use the up/down key to select Yes, and then press ***menu/select*** . You will hear a confirmation tone, and Done! appears.

De-register the Bluetooth Headset
If you want to stop using a paired headset completely, you can deregister it; this will allow you to pair another headset in the future. You can also try deregistering and re-pairing a headset if you can't connect to it.

1) When the phone is in standby mode, press ***menu/select*** on the handset.

2) Select the Bluetooth icon.

3) Use the up/down key to select Headset, and then press ***menu/select*** .

4) Press the **OPTIONS** soft key and select Deregister .

5) Use the up/down key to select Yes, and then press ***menu/select*** .
You will hear a confirmation tone, and Deregistration Successful appears.

Using Your Phone

note

- If the line is already in use, all other registered handsets will display "InUse"

Making Calls

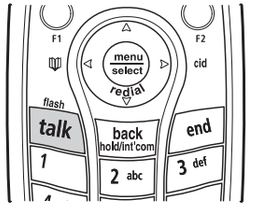

1) Remove the handset from the charging cradle.
2) Flip the top panel up (Flip Handset Only).
3) Press ***talk/flash*** .
4) Listen for the dial tone.
5) Dial the number.

OR

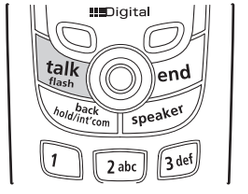

1) Remove the handset from the charging cradle.
2) Flip the top panel up (Flip Handset Only).
3) Dial the number.
4) Press ***talk/flash***.

- **Reminder:** Pressing ***menu/select*** on Flip Handset is the same as pressing the center of the joystick on the Extra Handset (see page 20).

If you need the phone to pause before dialing more digits (for example, to enter an access code or extension), press ***menu/select*** on the Flip Handset or press the center of the joystick on the Extra Handset or **OPTIONS** soft key, and select Pause Entry from the list. P appears in the display, which represents a 2-second pause.

From the Handset Speakerphone

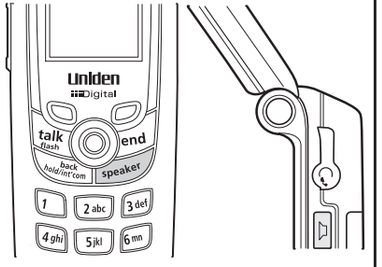

1) Remove the handset from the charging cradle.
2) Flip the top panel up (Flip Handset Only).
3) Press ▷ (Speaker Phone) on the side of the Flip Handset or ***speaker*** on the Extra Handset.
4) Listen for the dial tone.
5) Dial the number.

OR

1) Remove the handset from the charging cradle.
2) Flip the top panel up (Flip Handset Only).
3) Dial the number.
4) Press ▷ (Speaker Phone) on the side of the Flip Handset or ***speaker*** on the Extra Handset.

When the other party answers, talk into the microphone in the bottom of the handset.

note

For best performance, use the speaker phone in a quiet room and let the caller finish speaking before you speak. If you or the other party has difficulty hearing, adjust the speaker volume.

note

- For Flip Handset: If Open to Answer is ON, the phone will automatically answer the call when you flip the top panel up. (see page 23)
- If Any Key Answer is set to On, you can also press any number key on the keypad to answer a call. (see page 24)
- While using the handset speaker phone or a headset, closing the top panel will not hang up the call.

Receiving a call/Open to Answer set to OFF

Handset is in the cradle	Handset is off the cradle
1) Remove the handset from the charging cradle. 2) Flip the top panel up (Flip Handset Only). 3) Press ***talk/flash*** .	1) Flip the top panel up (Flip Handset Only). 2) Press ***talk/flash*** .

Hanging Up

From the handset or handset speakerphone, press ***end*** or close the top panel for Flip Handset or return the handset to the charging cradle for Extra Handset.

Switching to the Handset Speakerphone During a Call

To switch a normal call to the speakerphone, press ▷ (speaker phone) on the side of the Flip Handset or ***speaker*** on the Extra Handset. To switch from a speakerphone call to a normal call, press ▷ (speaker phone) or ***speaker***.

Moving out of range

If you move your handset farther from the base unit during a call, you might start to hear more noise than usual. If you go too far from the base, you'll hear a beep and see `No Signal Press HELP` . Press the **HELP** soft key on the display.

Call Waiting

If you hear a call waiting tone while you're on a call;

Australia:
Press ***talk/flash*** and then 2 to switch between calls.

New Zealand:
Press ***talk/flash*** to switch between calls.

note

- To scroll through the help, press the **>>|** soft key.
- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.
- Your phone can't show call waiting caller ID information when a call is on hold.

note

- If you leave a call on hold for more than 5 minutes, warning tone sounds and `Hold Reminder! Answer held line` appears, and the line will disconnect in 15 seconds.
- If someone is using another handset in Privacy Mode, `Unavailable` appears in the display and you cannot join the call.

Keypad Lock

You may lock the keypad in standby mode. Press and hold the ***/tone*** key until you hear a long tone. `Keypad Locked` will appear on the display.
To unlock the keypad, press and hold the ***/tone*** key until you hear the confirmation tone. `Keypad Unlocked` will appear on the display.

Placing a Call on Hold

During a call, press ***back/hold/int'com*** to put the call on hold. Press ***talk/flash*** to go back to the call.

Conferencing

If you have more than one handset, up to three people can participate in a conference call.

3-Way Conferencing

- Outside line +Handset +Handset

Joining a Conference Call

You can easily join a call already in progress.

From the handset

1) Press ***talk/flash*** or ▷ on the Flip Handset or ***speaker*** on the Extra Handset to join the call.

2) To hang up, return the handset to the cradle or press ***end*** on the handset. The other handset will still be connected to the call.

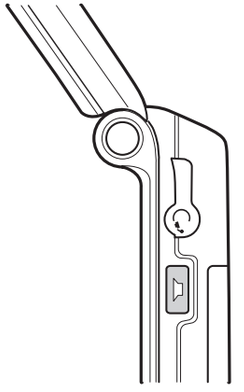

Redialing Calls

You can quickly redial the last 20 phone numbers for each handset.
With the phone in standby mode, press ***redial/*** ▽ on the handset. This brings up the redial list. Use the up/ down key to scroll through the numbers, and select the number you want to dial.

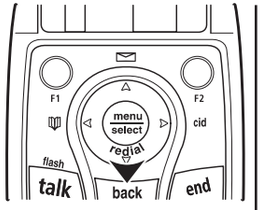

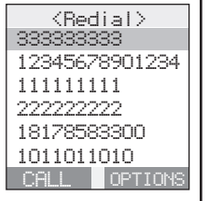

Press ***talk/flash*** (or ▷ or ***speaker***) to dial the selected number.

You can also display the redial list for redial number with the phone in talk mode. After selecting the redial number, press the **DIAL** soft key to redial the number.

Deleting Redial Records

If you want to delete a phone number from the redial list, go to the redial list in standby mode, and select the number you want to delete. Press the **OPTIONS** soft key, and select `Delete Selection` and then `Yes`. Press ***menu/select*** .If you want to delete all the redial records, select `Delete All` and then `Yes`. Press ***menu/select*** .

note

- Each redial record can store up to 32 digits.
- To store redial numbers in the phonebook see page 58.

(Ringer Options)

Ringer Volume

Using the Handset Volume Setting Menu

Ringer: Adjust the handset ringer volume.
You can choose from three different ringer volume settings on your handset: off, low, and high.

When the phone is in standby mode, go to the Ringer Options menu, and then select Ringer Volume.

Use the up/down key to select the ringer volume, and press the ***menu/select*** . You will hear a confirmation tone.

Ear speaker:

You can choose from four volume levels for the earpiece speaker.

To adjust the earpiece volume, go to Speaker Setup menu, and select Earpiece Volume and select the volume level you want to use.

You can also adjust the earpiece volume during a call by pressing the △ key (to make it louder) or ▽ key (to make it softer) on the side of the handset.

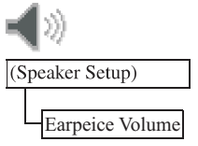

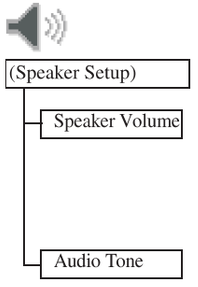

Speaker: Adjust the handset speaker volume
You can choose from six volume levels for the handset speakerphone. To adjust the speaker volume, go to Speaker Setup menu, and select Speaker Volume and select the volume level you want to use.
You can also adjust the handset speaker volume during a call by pressing the △ (to make it louder) or ▽ (to make it softer) key on the side of the handset.

Audio Tone
If you aren't satisfied with the audio quality of your phone, you can adjust the Audio Tone of the earpiece. Your phone gives you three audio tone options: low, natural or high. Go to Speaker Setup menu, and select Audio Tone and select the option that sounds best to you.
(Audio tone adjustments only apply to the earpiece, not the speakerphone).

Mute
While the handset is ringing, you can mute the handset ringer for this call by pressing ***end*** on the handset. The phone will ring again on the next call.

Mute the Microphone
When you're on the phone, press ***menu/select*** or **OPTIONS** soft key and select Mute to turn off the microphone so the caller can't hear you. The display shows Mute On while the microphone is muted. To turn off muting, repeat the above step again.

Tone Dialing Switch Over (Australia Only)

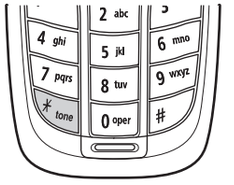

If your telephone company uses pulse dialing, you can switch over to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.

If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the ***/tone*** key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.

Privacy Mode

Privacy mode prevents interruption from other registered handsets. This works only when the phone is in use.

While on a call, press the ***menu/select*** key or the **OPTIONS** soft key. Use the up/down key to select `Call Privacy.` **P** appears in the display. To exit Privacy Mode, use the same procedure. `Privacy Mode Off` appears.

Find Handset

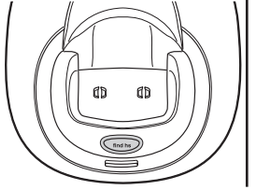

To locate the handset, press ***find hs*** on the base when the phone is in standby mode. Select the handset to page. The handset beep for 60 seconds, and `Pagina` appears on the handset display. To cancel paging, press any key on the handset or ***find hs*** on the base.

Reminder

The Date & Time must be set to use the Calendar features. To set the Date & Time, scroll to Global in the System Setup options (see page 26).

Your phone has a built-in calendar that you can use to schedule reminders and appointments (all the way through December 31, 2099). You can set alarms for up to 30 different events.
A pop-up screen appears and reminder tone sounds when the scheduled time & date comes. To show detailed info on the reminder, press the **VIEW** soft key. To mute the reminder tone, press the **MUTE** soft key.
To reset the reminder and clear the screen, press ***end*** when reminder tone stops `To dismiss Reminder display press` DISMISS appears. Press the DISMISS soft key. The phone returns to standby mode.

Scheduling a reminder

Select the reminder option to show Reminder (Calendar). Today is highlighted. If the reminder is set for the morning, a bar appears in the lower left of the date number; if the reminder is set for the afternoon or evening, a bar appears in the lower right of the date number. Use up, down, right or left key to move the cursor to the date.

1) Press ***menu/select*** to select a date.
2) Press the **STORE** soft key to add a reminder.
3) Press ***menu/select*** to set the date and time.
4) Use the number keypad or ****/tone*** to select the hours and minutes. Press ***menu/select*** when you're finished.
5) To change the title, select ! and press ***menu/select*** . Use the number keypad, left, right key, and the **DELETE** soft key. Press ***menu/select*** when you're finished.
6) If you want to set recurrence, select ,and press ***menu/select*** . Select the frequency (None, Daily, Weekly, Monthly, Yearly) from the list. Press ***menu/select*** when you're finished.
7) If you want your phone to ring when this reminder occurs, move to the line indicated, and press ***menu/select*** . Select the ringer tone you want the phone to ring. Press ***menu/select*** when you're finished.
8) To enter a text message for this reminder, select and press ***menu/select.*** 'Edit Message' appears. You can enter up to 80 characters. Press ***menu/select*** when you're finished.
9) When everything is correct, press the **DONE** soft key.

Editing and deleting reminders

You can edit reminders by pressing the **SCHEDULE** soft key, then select the reminder and press the **OPTIONS** key. Select 'Edit Selection' and you can edit the date, time, reminder tone, and text the same way you entered them for a new entry.
To delete reminders, select the reminder and press the **OPTIONS** soft key. Select Delete Selection. To delete all reminders, select Delete All.

Using the Phonebook

Your phone lets you store up to 100 entries in each handset. You can store up to 4 phone numbers for each name in your phonebook (for a total of 400 numbers), and you can assign names to groups for easy searching. You can store a distinctive ringer tone and picture display, to your each or group.
You can enter your phonebook by pressing the left key on the Flip Handset or by pushing the joystick left on the Extra Handset.

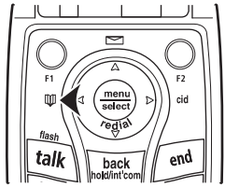

Creating and Editing Phonebook Entries

Press the left key and press the **STORE** soft key for the first entry. From 2nd entry, press the left key, and then the **OPTIONS** soft key. Select `New Entry` to store, or `Edit Selection` to edit the location. Enter as much of the following information as you want. Press ***menu/select*** to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.

Step 1:Name
Select and use the keypad to enter the name for this entry. You can enter up to 16 characters. If you don't want to enter a name, your phone will store this entry as No Name. Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry.

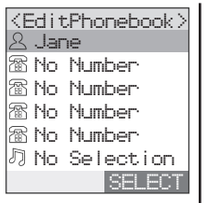

Step 2:Number
Select and enter a phone number for this entry. If you need your phone to pause between digits when it's dialing (for example, to enter an extension or an access code), press the **PAUSE** soft key to insert a two-second pause. You'll see a P in the display.
You can stack more than one pause together if two seconds isn't long enough. Each pause counts as one digit; you can enter up to 20 digits for the phone number.
Press ***menu/select*** when you're finished.
You can select an icon to remind you which number this is: home , work , mobile , or general phone number . Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry.

Step 3:Unique Ring
Select to attach a special ring to this phone. Select the ringer tone you want the phone to use when this person calls, or select No Selection to have the phone use its regular ringer tone. Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry.

note

You can save up to 4 numbers for each phonebook entry. You'll have to delete one of the existing numbers before you add a new one.

note

For New Zealand: Telecom access numbers are pre-programmed into speed dial locations as follows;

Divert On: SPD1
Divert Off: SPD2
Block CID: SPD3
Messages: SPD4
Directory: SPD6

Step 4:Unique Display
Select to attach a special screen display to this entry. Select the display you want the phone to use when this person calls, or select No Selection to have the phone use its regular display. You can press the **VIEW** soft key to see the display choices:
Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry.

Step 5:Phonebook Group
Select to place this entry into a phonebook group. Select the group (0-9) you want this entry to belong to, or select No Selection to leave the entry outside of any group. Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry. See page 61 for information on creating and editing groups.

Step 6:Speed Dial
Select ***0-9*** to save this number to one of the 10 speed dial numbers or No Selection if you don't want to save it to a speed dial number. If there's already a phone number saved to the speed dial number you select, your phone will ask if you want to overwrite the number. Press ***menu/select*** when you're finished, and your phone will go back to the current phonebook entry.

Storing Caller ID or Redial Numbers in the Phonebook

You can store Caller ID or redial numbers in your phonebook so you can use them later. Go to the Caller ID list or redial list and select the number you want to store. (If the Caller ID information didn't include the number, then you can't store it.)

1) With the phone in standby mode, go to the Caller ID list or redial list and select the number you want to store.

2) Press the **OPTIONS** soft key, and then select `Add to Phonebook`.

3) Use the up/down key to select `New Entry` to enter a new phonebook location. If you want to added a number to the existing phonebook location, select `Store & Edit`, and then select a location to edit.

4) Enter each entry and confirm the selection by following the steps in pages 56-57.

Storing and Editing Numbers from the Dial Operation

1) With the phone in standby mode, enter the number to store using the number keypad.

2) Press the **OPTIONS** soft key and select `Add to Phonebook`.

3) Use the up/down key to select `New Entry` to enter a new phonebook location. If you want to add a number to the existing phonebook location, select `Store & Edit` and then select a location to edit.

4) Enter each entry and confirm the selection by following the steps in pages 56-57.

Managing the Phonebook

With the **OPTIONS** soft key, you can delete phonebook entries, copy entries to another handset, check how many empty phonebook and speed dial entries you have available, sort your phonebook by groups, and name phonebook groups.

Deleting phonebook entries

Go to the phonebook and select the entry you want to delete. Press the **OPTIONS** soft key and select `Delete Selection`. Your phone will ask you to confirm and select `Yes`.

To delete all the entries from your phonebook, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select `Delete All`. Your phone will ask you to confirm and select `Yes`.

Copying phonebook entries to another handset

Note: When you copy entries to another handset, the unique ring, group, speed dial, and icon information won't be transferred. Your phone will cancel the copying process if any one of the following things occurs:

-- If the handset you are copying to doesn't have enough memory (the phone will show `Not enoush Memory in receivins unit`).
-- A call comes in during the copying process.

To copy a single entry, go to the Phonebook and select the entry you want to copy. Press the **OPTIONS** soft key and then Copy Selection. Select the handset you want to copy the entry to.
To copy all the phonebook entries, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Then select Copy All. Select the handset you want to copy the entries to. Your phone will ask you to confirm. Select Yes.

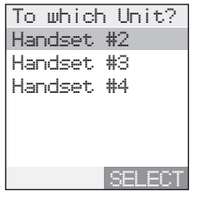

Checking the number of stored entries

To see how many phonebook entries you have, go to the phonebook and press the **OPTIONS** soft key and select PhoneBk Capacity. The phone will show you how many stored names (entries) and how many stored phone numbers (total) you have.
To see your speed dial entries, go to the phonebook and press the **OPTIONS** key and select Check Dial. The phone will show you which speed dial numbers have phone numbers stored in them.

Changing the sorting order

To change the sorting of your phonebook, go to the phonebook and press the **OPTIONS** soft key and select Sort. To see the list of names in alphabetical order, highlight Alphabetically and press ***menu/select*** .You can also enter a letter from the keypad to jump to the first entry beginning with that letter.
To see the list of groups in alphabetical order, highlight Group and press ***menu/select*** .

Naming phonebook groups

Your phone comes with 10 groups to organize your phonebook. You can name groups things like "Family" or "Friends" or "Softball team" to let you find entries in your phonebook more quickly.

Follow the steps below to name a group:

1) Go to the Phonebook and select the **OPTIONS** soft key.
2) Scroll down to Edit Group Name and press ***menu/select*** .
3) Scroll down to the group number you want to edit, and press ***menu/select*** .
4) Use the number keypad to enter a name for this group. Press ***menu/select*** when finished.

Making Calls with the Phonebook

To call someone in your phonebook, go to the phonebook and select that person's phonebook entry, and then press ***menu/select*** . Select the number (one of the four available) that you want to call, and then press ***talk/flash*** or .

You can also dial the number with the phone in talk mode. After select number, press the **DIAL** soft key. The number at the top of the list will dial.

Using the Speed Dial

With the phone in standby mode, press and hold the number of the speed dial entry you want to call until the phonebook entry appears. Select the number (one of the four available) that you want to call, and then press ***talk/flash*** or .

Caller ID Features

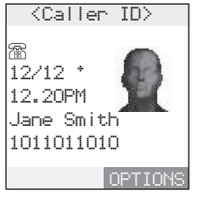

If you subscribe to Caller ID from your phone company, your phone will show you the caller's phone number whenever a call comes in: If you subscribe to Caller ID on Call Waiting (CIDCW) the phone will show the number of waiting calls (that is, calls that come in while you're on the line), see page 44 for details on how to answer the waiting call.
If the number matches an entry in your phonebook the caller's name can be displayed (see Name Tagging page 28).

Using the Caller ID List

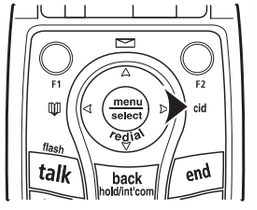

You can store up to 100 Caller ID numbers in each handset. To see the Caller ID list, press the right key on the handset. The phone will show the Caller ID list. You can use the up/down key to scroll through the list, or you enter a letter with the keypad to jump to the first caller ID name that starts with that letter.

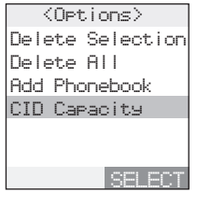

If you want to see how many Caller ID numbers are stored in your phone, Press the right key, and then the **OPTIONS** soft key. Select CID Capacity.

Calling someone from the Caller ID list

Go to the Caller ID list and select the number you want to call. Press ***talk/flash,*** ▷ on the Flip Handset or ***speaker*** on the Extra Handset.

note

- When you delete a Caller ID number, you delete it permanently.
- You must subscribe to voice mail service from your telephone company in order to use this feature. The voice mail service company will provide you with the access number.
- For New Zealand: The Telecom Voice Mail Access Number is pre-programmed into speed dial location 4.

Deleting Caller ID numbers

To delete only one Caller ID number, go to the Caller ID list and select the number you want to delete. Press the **OPTIONS** soft key, and select `Delete Selection`. When the phone asks you to confirm, select `Yes`. To delete all the Caller ID numbers, go to the Caller ID list and press the **OPTIONS** soft key. Select `Delete All`. When the phone asks you to confirm, select `Yes`.

Using One Touch Voice Mail Access

If you subscribe to voice mail service, you can use your phone to access your voice mailbox. The new message LED flashes whenever you have messages waiting in your voice mailbox. Just program the handset with your access number, and you can get your messages at the touch of a button on the handset. (The voice mail service provider will supply you with the access number. This number may be simply a phone number. Refer to the provider's literature.)

To program or delete your Voice Mail Access Number, See page 25.

Dialing your Voice Mail Service

Once you've programmed your personal access number, you can dial your mailbox with the touch of a button. When you have messages, simply press the up key (✉) on the Flip Handset or push the joystick up on the Extra Handset, If you have not entered the access number or it has been deleted, when you press the up key (✉) on the Flip Handset or push the joystick up on the Extra Handset, `No access no. Store number in Edit Voice Mail` appears and you will hear a beep. The phone returns to standby mode.

Resetting the New Message LED

The LED flashes when you have new messages in the voice mail service. If the LED remains on after you've retrieved your messages, you may need to reset the indicators. With the phone is in standby mode, press and hold ***find hs*** on the base until the paging sound stops (about 5 seconds).

Multi-Handset Features

The features in this section require a minimum of two handsets to operate. To add additional handsets to your system, see "Expanding Your Phone"on page 12.

Using DirectLink Mode

In DirectLink Mode, a pair of handsets can function as two-way radios. DirectLink Mode does not interfere with the main base's ability to make or receive telephone calls. You must set both handsets to DirectLink Mode to make a directlink call.

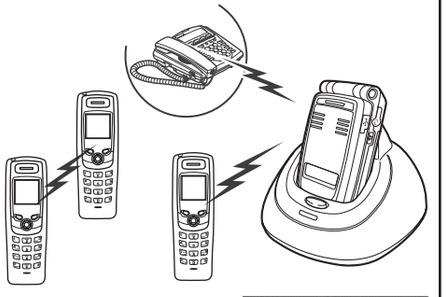

To enter DirectLink mode, Select Direct Link option in the main menu. And then press the **ENTER** soft key. `Direct Link Mode Complete` appears in the display.

To make a DirectLink call, press the **DirectLink** soft key. Select the handset you want to call. To cancel the call, press ***end*** . To answer a DirectLink call, press ***talk/flash*** or ▷ on the Flip Handset or ***speaker*** on the Extra Handset. Press ***end*** when you want to hang up.

To exit DirectLink mode and be able to receive normal phone calls again, press the **CANCEL** soft key, and then press the **OK** soft key.

note

- If the party is out of range, `No Signal` appears in the display, and the operation will be canceled.
- While a pair of handsets are in DirectLink mode, they cannot be used to make or receive calls. Other handsets can still make and receive calls.

note

- This feature only works when the handset is within the range of the base.
- If the party is out of range, Unavailable appears in the display, and the operation will be canceled.

Room/Baby Monitor

This feature allows you to monitor sounds in another room. Place a handset in the room you wish to monitor; it will function as a microphone. A second handset can be used as a remote speaker, allowing you to monitor sounds in the room.

Using Room/Baby Monitor

To enter Room Monitor mode, press ***menu/select*** .Then select the Room Monitor. Select the handset you want to monitor. Press ***end*** when you want to stop monitoring. To prevent the monitoring of a particular handset, simply turn off the Room Monitor feature on that handset.
To turn off the Room Monitor, go to System Setup, Handset Setup Menu, and then Room Monitor Select Off. You will hear a confirmation tone.

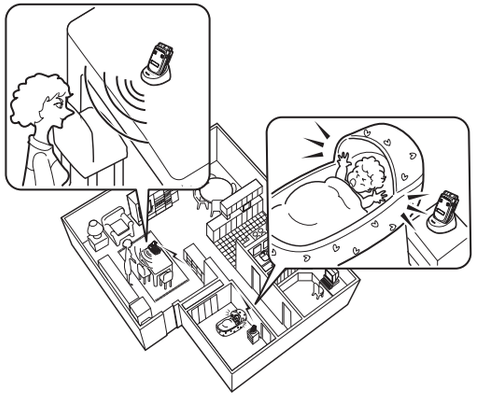

Intercom

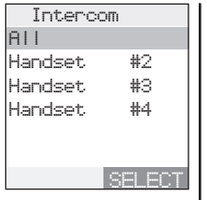

You can use the intercom to talk to another handset without using the phone line. While the phone is in standby mode, press ***back/hold/int'com*** . Select the handset you want to page. If you select `All`, all other handsets will be paged. If the handset you're trying to page is busy, the phone displays `System Busy Please try later`. If the handset you're trying to page is out of range, the phone displays `Unavailable`. The page is canceled.

Answering an intercom page

When the handset receives an intercom page, it sounds a tone and shows the ID of the handset that is paging. To answer the page, pick up the handset and press ***talk/flash,*** ▷ **,** or ***back/hold/int'com*** on the handset.

- If you receive an outside/int'com call or page while selecting the other handset, the operation is canceled.
- If the party does not answer within one minute, the operation is canceled.
- During an intercom call, if you receive a call, you will hear a ringer tone from the ear speaker.
- If all handsets are paged, only the first party to answer the page will connect.
- If you do not select a handset within 30 seconds, the operation will be canceled.

To hang up an intercom page, press ***end*** on either side of the handset.

Transferring a Call

You can transfer a call from one handset to another. During a call, press ***back/hold/int'com*** ; this will put the call on hold. Select the handset you want to page. If you select All, all other handsets will be paged. To cancel the page and go back to the caller, press ***talk /flash*** on the handset.

Answering a transfer page

When the handset receives a transfer page, it sounds a tone and shows the ID of the handset that is paging. Press ***talk/flash*** or ***back/hold/int'com*** on the handset, to answer the page.

If you want to accept the transfer to talk to the outside caller, who is on hold, press ***talk/flash***.

Note on Power Sources

Power Failure

In the event of a power failure you will not be able to make or receive calls with the telephone.

Battery replacement and handling

When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, your battery should last about one year.

Warning

To avoid the risk of personal injury or property damage from fire or electrical shock, use only Uniden AAD-8815 and AAD-600S (ELITE8815+1 only) AC adapters and Uniden BT-0002 and BT-0003 (ELITE8815+1 only) battery packs with your phone.

Caution

•Use only the specified Uniden battery pack (BT-0002 Flip phone)
(BT-0003 ELITE 8815+1 extra handset).
•Do not remove the batteries from the handset to charge them.
•Never throw the battery into a fire, disassemble them, or heat them.
•Do not remove or damage the battery casing.

- A replacement Uniden adaptor or battery may be purchased by visiting our website at www.uniden.com.au or www.uniden.co.nz
- Use only the Uniden (BT-0002 and BT-0003) rechargeable battery pack supplied with your cordless phone.

General Information

Operating temperature:
0 °C to +50 °C (+32 °F to +122 °F)

AC Adapter Information

AC Adapter part number:	AAD-8815 (base), AAD-600S (ELITE8815+1 charger)
Input Voltage:	240V AC 50Hz
Output Voltage:	9V 200mA 1.8VA and 8V 200mA 1.6VA (base), 9V DC 210mA (ELITE8815+1 charger)

Battery Information

Battery part number:	BT-0002 (Flip Handset), BT-0003 (ELITE8815+1 extra handset)
Capacity:	980mAh, 3.7V (Flip Handset), 900mAh, 3.6V (ELITE8815+1 extra handset)

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first. If these steps do not solve your problem, visit our website for further information (www.uniden.com.au or www.uniden.co.nz).

Symptom	Suggestion
The **charge** LED won't illuminate when the handset is placed in the cradle.	• Make sure the AC adapter is plugged into the charger and wall outlet. • Make sure the handset is properly seated in the cradle. • Make sure the charging contacts on the handset are clean.
The audio sounds weak.	• Move the handset and/ or base away from metal objects or appliances and try again. • Make sure that you are not too far from the base.
Can't make or receive calls.	• Make sure that you are not too far from the base. • Make sure the line is not in use. If call is already using a line, you cannot use that line to make another outside call. • Check both ends of the base telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter for a few minutes, and then reconnect it. • De- register the handset (see “De- register the Handset” on page 73) and register the handset (see “Register the Handset” on page 13).
The handset doesn't ring or receive a page.	• Make sure that you are not too far from the base. • Charge the batteries in the handset for 10 hours (for Flip Handset) or 15-20 hours (for Extra Handset) by placing the handset on the base or charging cradle. • De- register the handset (see “De- register the Handset” on page 73) and register the handset (see “Register the Handset” on page 13).
Severe noise interference.	• Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.

Symptom	Suggestion
The Caller ID does not display.	• The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. There may be a problem with your Caller ID service.
You cannot register the handset at the base.	• Charge the battery pack for 10 hours (for Flip Handset) or 15-20 hours (for Extra Handset). • De- register the handset (see “De- register the Handset” on page 73) and register the handset (see “Register the Handset” on page 13).
The handset doesn't communicate with other Handsets.	• De- register the handset (see “De- register the Handset” on page 73) and register the handset (see “Register the Handset” on page 13). • Make sure that you have registered all handsets.
An extra handset can't join the conversation.	• Make sure there are not two handsets already using the conference feature (see "Conferencing" on page 46 for 3-way combination). • Make sure that another handset is not in privacy mode.

Bluetooth Trouble Shooting

Symptom	Suggestion
Unable to pair headset to my ELITE8815/8815+1	• Make sure your device is Bluetooth enabled. • Make sure the cordless handset has Bluetooth feature set to ON and not OFF. • Confirm correct PIN Code is being entered. • Make sure your Bluetooth headset supports Headset Profile (HSP).
Unable to make or receive calls using Bluetooth headset.	• Make sure your Bluetooth headset is in close range of the cordless handset it's paired with. (In theory, you have 15 feet (5m) line of sight range. Walls or other radio interference may necessitate closer proximity of the devices.) • Make sure your Bluetooth headset supports Headset Profile (HSP).

System Reset

De-register the Handset

1) Press and hold ***end*** and **#** for more than 5 seconds.
   Select Deregister HS.
2) The phone will ask you to confirm the deregistration.
   Select Yes.
   When the base information is deleted, the handset displays. Must place handset in base to register! Models may vary, refer to Owners Manual for help. Re-register the handset to the base (see page 14).

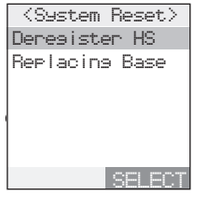

Replacing the Base Setting

1) Press and hold ***end*** and **#** for more than 5 seconds.
   Select Replacing Base.
2) Select Yes.
3) You will hear a confirmation tone. The base information will be deleted.
   When the base information is deleted, the handset displays. Must place handset in base to register! Models may vary, refer to Owners Manual for help. Re-register the handset to the base (see page 14).

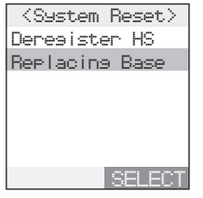

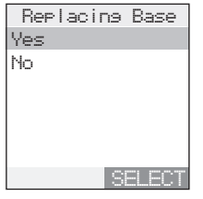

Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or base is exposed to moisture or liquid, but it only affects the exterior plastic housing.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic- housing (i. e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	**Handset:** 1) Remove the battery cover and leave it off for ventilation. 2) Remove the battery pack by disconnecting. 3) Leave the battery cover off and the battery pack disconnected for at least 3 days. 4) Once the handset is completely dry, reconnect the battery pack and he battery cover. 5) Recharge the handset's battery pack for 20 hours before using again. **Base:** 1) Disconnect the AC adapter from the base unit, cutting off electrical power. 2) Disconnect the telephone cord from the base unit. 3) Let dry for at least 3 days. **IMPORTANT:** You must unplug the telephone line while recharging the battery pack to avoid charge interruption. **CAUTION:** DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven. After following these steps, if your cordless telephone does not work, please visit our website for further information (www.uniden.com.au or www.uniden.co.nz).

Index

A
Animations 35
Anykey Answer 24
Audio Tone 51

B
Banner 24
Battery
  Replacement 68
Bluetooth feature
  De-registering 40
  Handset property 39
  Headset paired 38
  Reconnecting 39
  Turning on or off 38

C
Calendar 53
Call transfer feature 67
Caller ID
  Call Waiting 44
Color Scheme 34
Conference 46

D
Date & time 26
Delete ringer 33
De-registering the Handset 73
Dial mode 27
Digital security code 15
DirectLink 64
Display Option 22

E
Earpiece volume 50
Expanding your phone 12

F
Find handset 52

G
General information 69
Global setup 26

H
Hands-free conversation 42
Hanging up 43
Headset installation 16
High Speed Internet 11
Hold 45
Holster 15

I
Intercom 66

K
Key touch tone 24

L
LCD contrast 34
Liquid damage 74
Low battery 9

M
Making a call 41
Mute
  Handset ringer 51
  Microphone 51

O
Open to Answer 23
Out of range 44

P
Phonebook
  Capacity 60
  Copying entries 59
  Group 57
  Making calls 61
  Name 56
  Number 56
  Sort order 60
  Speed dial 57
  Unique display 57
  Unique ring 56
Power failure 68
Privacy mode 52

R
Receiving a call 43
Redialing a call 48
Register the handset 13
Reminder 53
Ringer Tone
  Changing 32
  Deleting 33
  Playing 32
  Storing 31
Ringer volume
  Handset 49
Room/baby monitor 65

S
Setting up
  Base unit 10
  Telephone Line 11
Soft Key 19
Speaker phone 42
Speaker volume
  Handset 51
Storing a caller ID or redial number 58
System Setup 23

T
Tone dial 52
Transferring a call 67
Troubleshooting 70

U
Unique ID 25
Unique Ring 56

V
Vibrate
  Call vibrate 31
Vibrate All 30
Voice Mail Access 63
  Edit (Store/Delete) 25
  Reset Indicator 63

W
Wallpaper 33
Warranty 80

MEMO

MEMO

MEMO

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498 Uniden New Zealand Limited
Warranty is only valid in the original country of purchase.

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its **ELITE 8815/8815+1** (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is;

(A) Damaged or not maintained as reasonable and necessary,
(B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
(C) Improperly installed,
(D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
(E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden.

PARTS COVERED: This warranty covers for one (1) year, the Base unit and handset (**ELITE 8815**) or base, charger and handsets (**ELITE8815+1**). All accessories (AC Adapter etc) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service.
THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION

345 Princes Highway,
Rockdale,
NSW 2216,
AUSTRALIA
Fax: (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION

150 Harris Road,
East Tamaki,
Auckland,
NEW ZEALAND
Fax: (09) 274 4253
www.uniden.co.nz

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden®

© 2005 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in China UPZZ01765BZ(0)